

Standard Quick Clamp (#90550)









Standard Screw Clamp (#90551)

Standard Dual Clamp (#90553)

Tall Quick/Dual Clamp (#90560)

Tall Screw/Dual Clamp (#90561)

Fixed Leg (#90570)

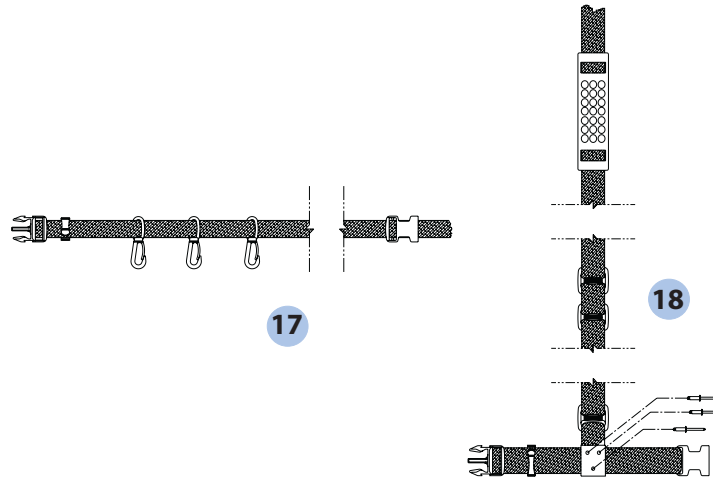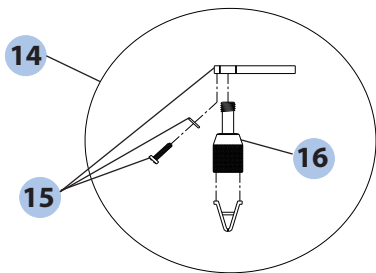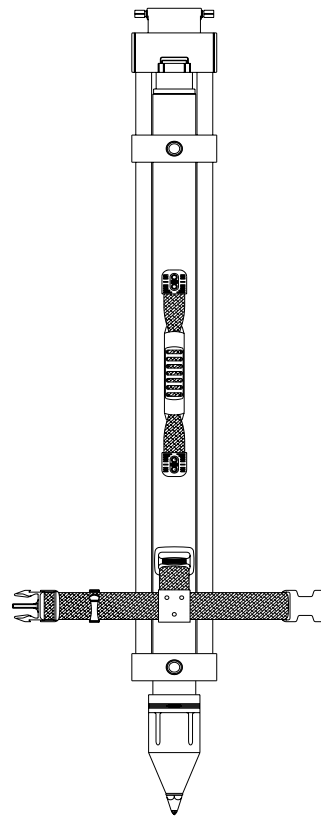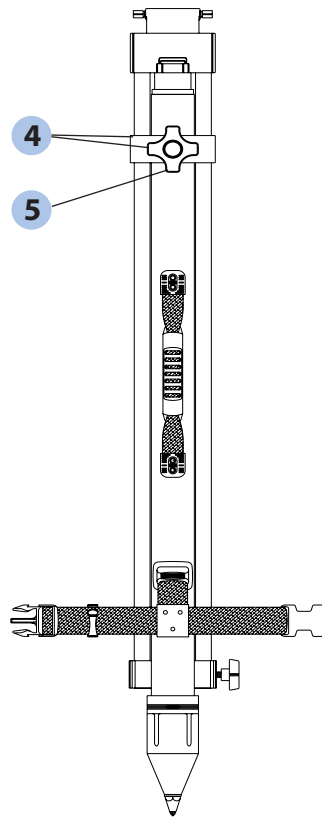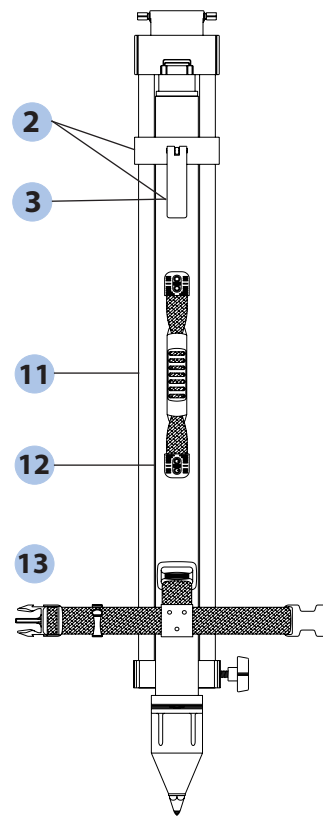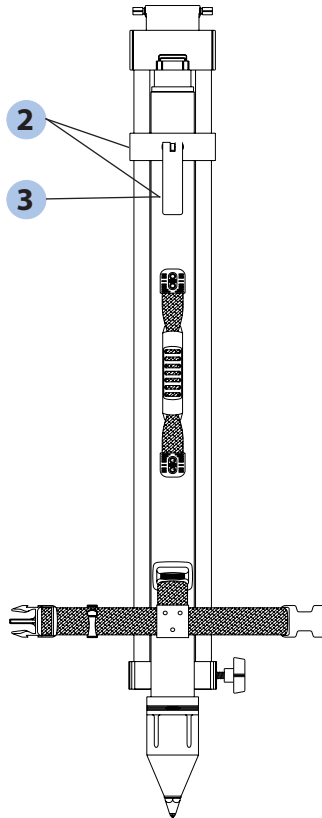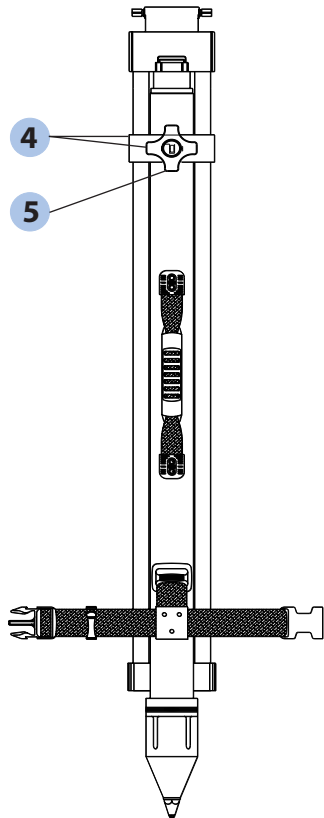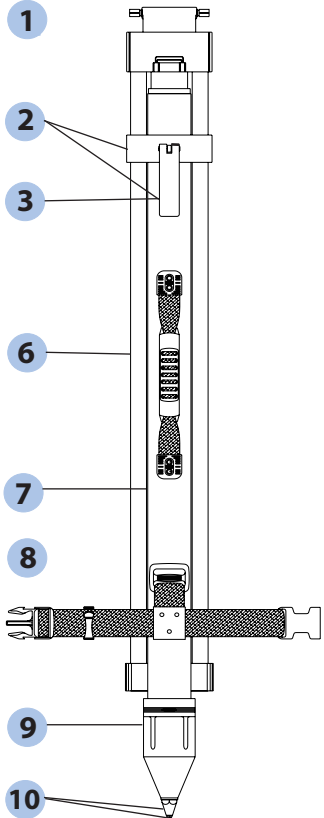

Tri-Max Tripod Parts List

Item #	Part No.	Description
1	91610	Tri-Max Snap Head Cover
2	91705	Tri-Max Quick Clamp Assembly (#90550/#90553/#90560)
3	91711	Tri-Max Quick Clamp Handle (#90550/#90553/#90560)
4	91706	Tri-Max Screw Clamp Assembly (#90551/#90561)
5	91710	Tri-Max Screw Clamp (#90551/#90561)
6	91725	Tri-Max Standard Outer Leg (In House Repair)
7	91721	Tri-Max Standard Center Leg (with handle)
8	91720	Tri-Max Standard Center Leg (without handle) (not shown)
9	91701	Tri-Max Tripod Foot
10	91700	Tri-Max Tripod Point
11	91735	Tri-Max Tall Outer Leg (In House Repair)
12	91731	Tri-Max Tall Center Leg (with handle)
13	91730	Tri-Max Tall Center Leg (without handle) (not shown)
14	91749	Tri-Max Bell Complete Assembly
15	91751	Tri-Max Bell Retainer Assembly
16	91750	Tri-Max Bell Replacement
17	91715	Tri-Max Kick Back Retaining Strap
18	91716	Tri-Max Strap Kit